



GETTING TO KNOW YOUR
2021
TRAILBLAZER



chevrolet.com

Review this quick reference guide for an overview of some important features in your Chevrolet Trailblazer. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.chevrolet.com. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL



Cruise Control
Forward Collision
Alert Buttons

Turn Signal
Lever/IntelliBeam
Control

Driver
Information
Center

Driver Information
Center Controls/
Voice Recognition
Buttons

Windshield
Wipers
Lever

Exterior Lamps/
Instrument
Panel Lighting
Controls

Power
Liftgate
Control

Audio Favorite
Station or Seek
Controls (behind
steering wheel)

Steering Wheel
Adjustment Lever
(under steering
column)

Audio Volume
Controls
(behind
steering wheel)

Engine Start/
Stop Button
(on instrument
panel)

SYMBOLS



Low Fuel



Traction Control Off

BRAKE

Brake System



Cruise Control



StabiliTrak Active



StabiliTrak Off



Forward Collision Alert



Security



PARK Electric Parking Brake



Service Electric Parking Brake



Lights On Reminder



Airbag Readiness



 
Engine Oil Pressure



Check Engine



Lane Keep Assist

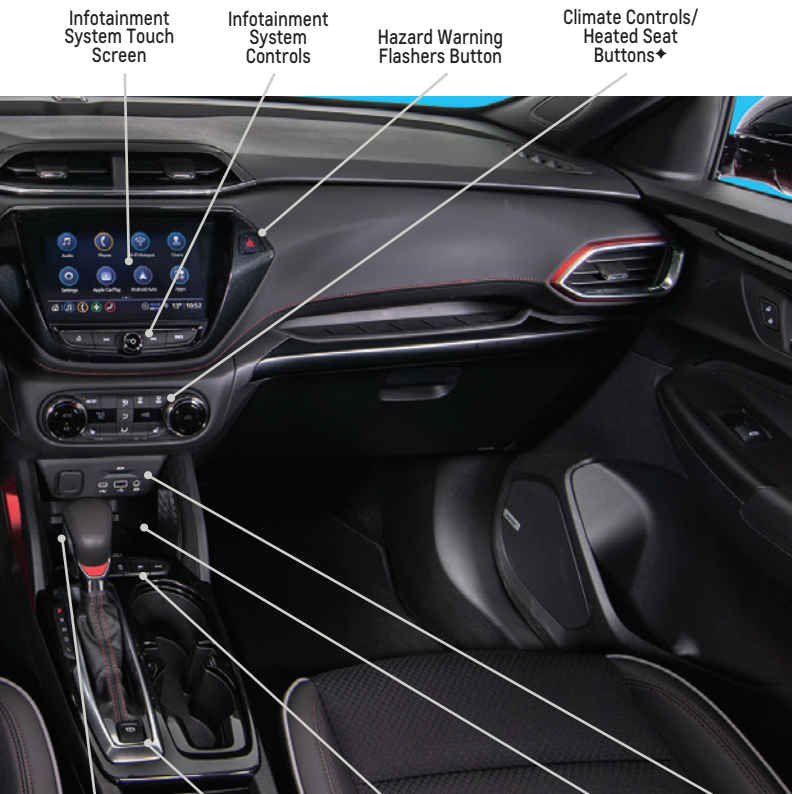

Infotainment System Touch Screen

Infotainment System Controls

Hazard Warning Flashers Button

Climate Controls/Heated Seat Buttons♦

Shift Lever Manual Mode Buttons

Electric Parking Brake Switch

Auto Stop-Start Disable/Lane Keep Assist/Traction Control & StabiliTrak/Sport Mode♦/Snow Mode♦/AWD♦ Buttons

Wireless Charging Pad♦

USB Ports/Accessory Power Outlet/SD Card Reader♦



Vehicle Ahead



Charging System



Pedestrian Ahead



Antilock Brake System



Low Tire Pressure



Door Ajar



Driver Seat Belt Reminder



Passenger Seat Belt Reminder

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)

Lock

Press to lock all doors.

Unlock

Press to unlock the driver's door.

Press again to unlock all doors and liftgate.

Power Liftgate[†]

Press twice to open or close the liftgate.
Press once to stop power liftgate operation.

Vehicle Locator/Panic Alarm


 
Press and release to locate your vehicle.
The horn sounds and lights flash 3 times.


Press and hold to activate the alarm. Press again to cancel the alarm.

Note: To change the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Remote Vehicle Start[†]

Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat the steps for an additional 15 minutes.
- To cancel a remote start, press and hold the  button until the parking lamps turn off.

Key Release

In case of loss of vehicle power, press the button on the side of the transmitter to pull out the door lock key. Remove the cap on the rear part of the driver's door handle to access the lock.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM[†]

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of the liftgate or the door being unlocked.

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on the front passenger's door handle to unlock all doors.
- ▶ Press the touchpad above the license plate to open the liftgate.



KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

Note: To change the lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

 
KEYED IGNITION (L AND LS MODELS ONLY)

STARTING THE VEHICLE

- ▶ With the vehicle in Park or Neutral, rotate the key clockwise to the Start position.

TURNING OFF THE VEHICLE

- ▶ Shift to Park.
- ▶ Push the key all the way in (1) and then rotate the key counter-clockwise to the Lock/Off position (2).

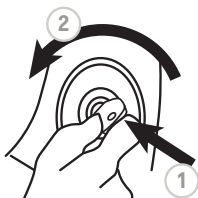

See *Driving and Operating* in your Owner's Manual.

KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press and hold the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green button indicator will illuminate.



Note: If the Remote Keyless Entry transmitter battery is weak, place the transmitter in the pocket at the back of the small storage compartment in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.

STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode to operate the radio, windows and other accessories with the engine off. The amber button indicator will illuminate.

See *Driving and Operating* in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever under the left side of the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See *Instruments and Controls* in your Owner's Manual.

POWER FRONT SEATS

POWER SEAT ADJUSTMENTS

A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment



Press and hold the round control to adjust the lumbar support.



See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry (RKE) transmitter twice.
- ▶ Press the  **Power Liftgate knob (A)** on the driver's door.
- ▶ Press the touchpad (B) above the license plate to open the liftgate.
- ▶ Press the button (C) on the bottom edge of the liftgate to close the liftgate.



PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the Power Liftgate knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button (C) on the bottom edge of the liftgate until the turn signals flash and a beep sounds.

HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper, left of center. The RKE transmitter must be within 3 feet of the liftgate. The Chevrolet logo is projected on the ground near the rear bumper, indicating the kicking motion location for hands-free operation. The logo is shown for 1 minute, depending on operating conditions.



See Keys, Doors and Windows in your Owner's Manual.

FOLDING FRONT PASSENGER SEATBACK ♦

The front passenger seatback can be folded flat for additional cargo space.

- ▶ With the head restraint lowered and the seat moved as far back as possible, lift the seatback adjustment lever at the base of the seatback to fold the seatback forward.

See Seats and Restraints in your Owner's Manual.

REAR SEATS

FOLDING THE 40/60 REAR SEATBACKS

1. Press the button on the head restraint. The head restraint will fold automatically.
 2. Make sure the seat belt is in the retainer hook.
 3. Pull the lever on top of the seatback (A) and fold the seatback forward. A red tab near the lever is visible when the seatback is unlatched.
- ▶ To raise each seatback, lift it up until it locks in place.



See Seats and Restraints in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if certain operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF. The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop time has reached the maximum allowed time.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the **(A) Stop/Start** button on the center console to turn off the automatic engine stop/start system. The button indicator is illuminated when the system is off. The Auto Engine Stop/Start system turns on each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

DRIVER INFORMATION CENTER (DIC)

The DIC on the instrument cluster displays a variety of vehicle messages and information.

DIC CONTROLS

If equipped with the base DIC, use the controls on the right side of the steering wheel to select the Trip and Vehicle menus.

If equipped with the color DIC⁺, use the controls on the right side of the steering wheel to select the Info (includes trip and fuel information), Audio, Navigation, Phone, and Options menus.

 
- ▶ Press the ◀ or ▶ button to move between the display zones. Press the ◀ button to exit a display menu.
- ▶ Rotate the thumbwheel up or down to scroll through the menus.
- ▶ Press the thumbwheel to open a menu, or to select or reset an item.

SELECT INFO PAGES (COLOR DIC⁺)

1. Use the controls to open the Options menu.
2. Scroll to Info Page Options. Press the thumbwheel to enter the menu.
3. Scroll through the list of items.
4. Press the thumbwheel to select or deselect an item to display in the Info menu.



Color DIC⁺ shown

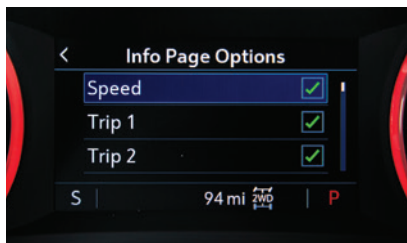

See Instruments and Controls in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the (P) Parking Brake switch on the center console.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) switch.

Note: The parking brake will release automatically if the vehicle is running, placed into gear, and an attempt is made to drive.

See Driving and Operating in your Owner's Manual.

CLIMATE CONTROLS



AUTOMATIC OPERATION

- ▶ Press AUTO.
- ▶ Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, the Auto indicator light turns off and automatic operation for that function is disabled.

CLIMATE DISPLAY

- ▶ Select the Climate icon on the Home page of the infotainment screen to view the current operation of the Climate Controls.



See Climate Controls in your Owner's Manual.

WIPERS AND WASHERS

WINDSHIELD WIPERS

Raise or lower the wiper lever.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Single Wipe

Washer Fluid

Pull the lever to wash the windshield.



REAR WINDOW WIPER

Turn the end of the wiper lever.

OFF

INT Intermittent Wipes

ON

Rear Washer Fluid

Push the lever to wash the rear window.

See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Press to Talk

Press to answer an incoming call or to use natural voice recognition[†] with the Bluetooth or OnStar[®] system.

Press and hold to activate Phone Assistant Voice Recognition (Siri or Google Assistant) on a paired, compatible cell phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

Seek

Rotate the thumbwheel to seek the next radio station when viewing the Audio display on the Driver Information Center.

Volume

(behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station/Seek (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track, or to seek the next available station or track.

- ▶ To set the next/previous button to select favorites or activate the seek function, go to Audio menu > Favorite Button Setting on the Driver Information Center.



INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures on the touch screen, such as tap, drag, and swipe, to interact with the system. For assistance, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/how-to-support.

MANAGING HOME PAGE ICONS

1. Press the Home button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

See *Infotainment System* in your Owner's Manual.


STORING FAVORITES

 
Radio stations from all bands (AM, FM or SiriusXM⁺) can be stored in any order. The audio source options are on the left side of the Audio page.

1. Tune in the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.

BLUETOOTH VOICE RECOGNITION


Bluetooth voice recognition allows access to the voice recognition commands on a compatible, paired cell phone; e.g. Siri or Google Assistant.

- ▶ To activate Bluetooth Voice Recognition, press and hold the  **Press to Talk** button for a few seconds.

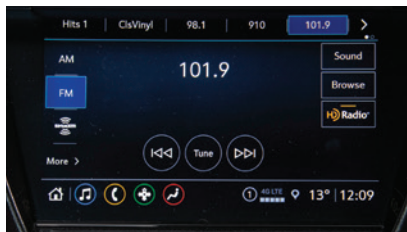


NATURAL VOICE RECOGNITION⁺

 Control the music source, make phone calls hands-free (after pairing your Bluetooth-enabled phone), and perform other tasks using the natural voice recognition system.

1. Press the  **Press to Talk** button on the steering wheel.
2. After the radio plays a prompt, say what you want it to do using natural speech. Examples: "Call Dave" or "Tune 99.5 FM." Say "Help" for assistance.


APPLE CARPLAY

Apple CarPlay capability is available through a compatible smartphone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
 2. The Apple CarPlay icon will illuminate. Touch the icon to have your apps displayed.
- ▶ Press the  **Home** button to exit Apple CarPlay. To return to the last page viewed in Apple CarPlay, press and hold the **Home** button.

ANDROID AUTO

Android Auto capability is available through a compatible smartphone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
 2. Connect your compatible phone by plugging the phone's USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
 3. The Android Auto icon will illuminate. Touch the icon to have your apps displayed.
- ▶ Press the  **Home** button to exit Android Auto. To return to the last page viewed in Android Auto, press and hold the **Home** button.

See *Infotainment System* in your Owner's Manual.

INFOTAINMENT SYSTEM

WIRELESS APPLE CARPLAY AND WIRELESS ANDROID AUTO[◆]

Apple CarPlay and Android Auto can be set to connect wirelessly when a compatible phone is paired. The feature also must be selected in your phone's Bluetooth settings.

- ▶ To connect automatically, go to Phone icon > Phones and select the ⓘ Information icon. Turn Apple CarPlay or Android Auto on or off.

SIRIUSXM[®] WITH 360L[◆]

SiriusXM with 360L provides subscribers an enhanced in-vehicle listening experience with unique satellite and streaming channels, on-demand content, personalized recommendations, and an interactive interface. Go to SiriusXM.com for more information. For the full SiriusXM with 360L experience, OnStar Connected Access is required. Learn more about OnStar services at onstar.com.

APPS[◆]

In-vehicle apps – connecting to music, news, weather, travel information and more – are available for download to the infotainment system through the Apps icon on the Home page. Downloading and using the apps requires internet connectivity and a data plan accessed through the vehicle's OnStar 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

PORTABLE AUDIO DEVICES

USB ports (Type A and Type C) for data and charging are located near the front of the center console.

Connect an iPod®, iPhone®, MP3 Player, or a USB flash drive to a USB data port.

- ▶ Touch the Audio icon and then touch More, if necessary, to select the USB device as the audio source.

USB ports[◆] on the rear of the center console are for charging only.

See Infotainment System in your Owner's Manual.

WIRELESS CHARGING[◆]

The Wireless Charging system for smartphones is located at the front of the center console. Visit my.chevrolet.com/how-to-support to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be on, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad. There should not be any objects between the smartphone and the charging pad.
3. Place the smartphone, face up, on the pad.
4. The ⚡ charging symbol will appear on the infotainment screen when charging.




See Instruments and Controls in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.


Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions.

 
PAIR A PHONE

1. To use voice recognition, press the  **Press to Talk** button; after the beep, say "Pair phone"; or to use the infotainment screen, select the Phone icon > Connect Phone > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed. Depending on the phone, your phone book may be downloaded automatically.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.


- ▶ To set the first and secondary phones, go to Phone icon > Phones and select the  information icon.

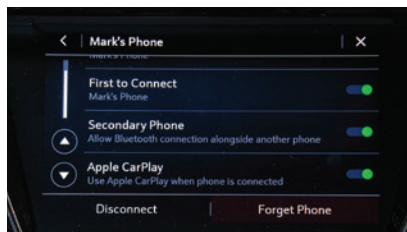

See *Infotainment System* in your Owner's Manual.

VEHICLE CUSTOMIZATION

Some vehicle features can be customized using the Settings menus and the infotainment screen icons. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press  Back to exit each menu.



See *Instruments and Controls* in your Owner's Manual.

ONSTAR® 4G LTE WI-FI® HOTSPOT

With the vehicle's available 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. For more information on use and system limitations, visit my.chevrolet.com/how-to-support.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.

See *Infotainment System* in your Owner's Manual.

LIGHTING

EXTERIOR LAMP CONTROLS

 **Off/On**

AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps***

Press the button (A) to turn the fog lamps on or off.

 
 




INSTRUMENT PANEL LIGHTING

 **Instrument Panel Illumination**

Press and release the knob (B) to extend it. Turn the knob to adjust the instrument panel lighting.

INTELLIBEAM SYSTEM

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions to provide enhanced visibility while driving at night. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- ▶ With the lamp control in the AUTO or  Headlamps position, press the  button (C) on the turn signal lever to turn the IntelliBeam system on or off.



Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See *Lighting* in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

FORWARD COLLISION ALERT – The 🚗 Vehicle Ahead indicator is green on the instrument cluster when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound.

- ▶ Press the 🚗 **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near. The setting is displayed on the Driver Information Center.

FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle detected ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed. The Follow Distance page must be selected under the Info Page Options menu.

AUTOMATIC EMERGENCY BRAKING – In detected potential imminent collision situations with vehicles detected directly ahead, the system can provide alerts and enhance driver hard braking or automatically apply hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

- ▶ To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

 
FRONT PEDESTRIAN BRAKING – During daytime driving, the system detects pedestrians directly ahead up to a distance of approximately 131 feet and displays an amber 🚶 indicator on the instrument cluster. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and rapid beeps sound. The system may prepare the brakes or automatically apply hard emergency braking, if you have not already done so.

- ▶ To set the system to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help avoid collisions due to unintentional lane departures. The 🚗 Lane Keep Assist indicator is green on the instrument cluster if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by providing brief, gentle steering wheel turns and displaying an amber 🚗.

If active driver steering is not detected, the amber 🚗 may flash and 3 beeps may sound on the side of the departure direction as the lane marking is crossed. In order to use this system safely, the driver needs to steer and be in complete control of the vehicle.


- ▶ To turn on or off, press the 🚗 **Lane Keep Assist** button (A) on the center console.

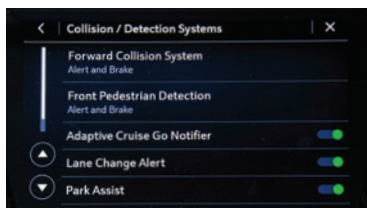

DRIVER ASSISTANCE SYSTEMS

TRACTION CONTROL AND STABILITRAK – The full-time traction control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Traction control should be turned off if the vehicle is stuck and rocking the vehicle is required.

- ▶ To turn on or off, press the  **Traction Control/StabiliTrak Off** button on the center console. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.

 
LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT* – While driving, the system displays a  warning symbol on the left or right side mirror when a moving vehicle is detected rapidly approaching or is in a side blind zone. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

REAR CROSS TRAFFIC ALERT* – When in Reverse, the system warns of cross traffic approaching in either direction by displaying a red alert on the infotainment screen and beeps sound.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

REAR PARK ASSIST* – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center. A beep sounds when an object is detected and 5 beeps sound when an object is very close.

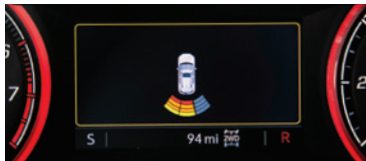


- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Park Assist.

REAR VISION CAMERA – When in Reverse, a view of the area behind the vehicle displays on the infotainment screen.

- ▶ To turn the guidelines on or off, touch the Guidelines button at the bottom of the infotainment screen.

See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITOR




The  Low Tire Pressure light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated (excluding the spare tire). Fill the tires to the recommended pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended cold tire pressure (excluding the spare tire). With the vehicle on, the horn sounds and the turn signals change from flashing to solid when the recommended pressure is reached.

See Vehicle Care in your Owner's Manual.

CRUISE CONTROL ♦

SETTING CRUISE CONTROL

- ▶ Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
- ▶ When traveling at the desired speed, press the switch down to the **SET-** position to set the speed. The  symbol will illuminate in green on the instrument cluster.



ADJUSTING CRUISE CONTROL


RES+ Resume/Accelerate

Press up to resume a set speed. When active, press up to increase speed.

SET- Set/Coast

When active, press down to decrease speed.





Cancel

Press the  button, or press the brake pedal, to cancel the Cruise Control without erasing the set speed from memory.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

ADAPTIVE CRUISE CONTROL-CAMERA ♦

The system enhances regular Cruise Control to maintain a following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the  **Following Gap** button to select a gap setting of Far, Medium or Near. This is also the Forward Collision Alert setting.
- ▶ Press and hold the  **Cancel** button to switch between  regular Cruise Control and  Adaptive Cruise Control.

See Driving and Operating in your Owner's Manual.

AUTOMATIC TRANSMISSION MANUAL MODE

Manual mode allows you to choose the top gear limit. It can be used to limit the vehicle's speed when driving downhill or towing a trailer.

1. Move the shift lever to L (Low).
2. Press the + (plus) or – (minus) button on the shift lever to increase or decrease the gear range available. The current gear will be displayed on the Driver Information Center.

If vehicle speed is too high or low for the requested gear, the shift will not occur.



See Driving and Operating in your Owner's Manual.

DRIVER MODE CONTROL ✦

The Driver Mode Control automatically adjusts various vehicle control systems based on driving preferences, weather and road conditions on Front-Wheel Drive (FWD) and All-Wheel Drive (AWD) models. The Driver Mode Control buttons are located on the center console.

FWD MODELS

❄️ **Snow** – Provides more progressive throttle input for improved acceleration on snow- and ice-covered roads.

🏎️ **Sport** – Modifies steering effort and shifting for a sportier feel and response.

AWD MODELS

AWD All-Wheel Drive – Adds unique calibrations for more rear-wheel torque at lower speeds to improve the driving experience on moderately steep and unpaved surfaces.

🏎️ **Sport** – Modifies steering effort and shifting for a sportier feel and response.



 
AWD model shown

See Driving and Operating in your Owner's Manual.

CARGO STORAGE

ADJUSTABLE CARGO FLOOR

- ▶ Lift up the cargo floor for access to additional storage space.
- ▶ Remove and reinstall the cargo floor on the upper or lower floor brackets (A) to adjust the height of the floor. Use the upper brackets to create a flat load floor when folding the rear seat.

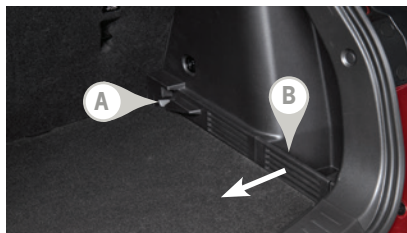

REVERSIBLE CARGO FLOOR

- ▶ Turn over the cargo cover floor for a rugged, easy-to-clean surface that provides convenient storage for dirty or damp items.

CARGO SIDEWALL STORAGE

- ▶ Detach the lower storage dividers (B) on either side of the cargo area for additional storage space for longer items. To remove a storage divider, pull outward to unsnap the tabs securing the divider.

See Storage in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-start, flat tire and lock-out) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

ONSTAR ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security Plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at my.chevrolet.com.

We recommend always using ACDelco or GM Genuine Parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2020 General Motors. All rights reserved.



* 8 4 4 0 1 9 2 4 A *

GENERAL MOTORS

84401924 A